
Whirlpool

TOP AND CABINET PARTS

AUTOMATIC WASHER

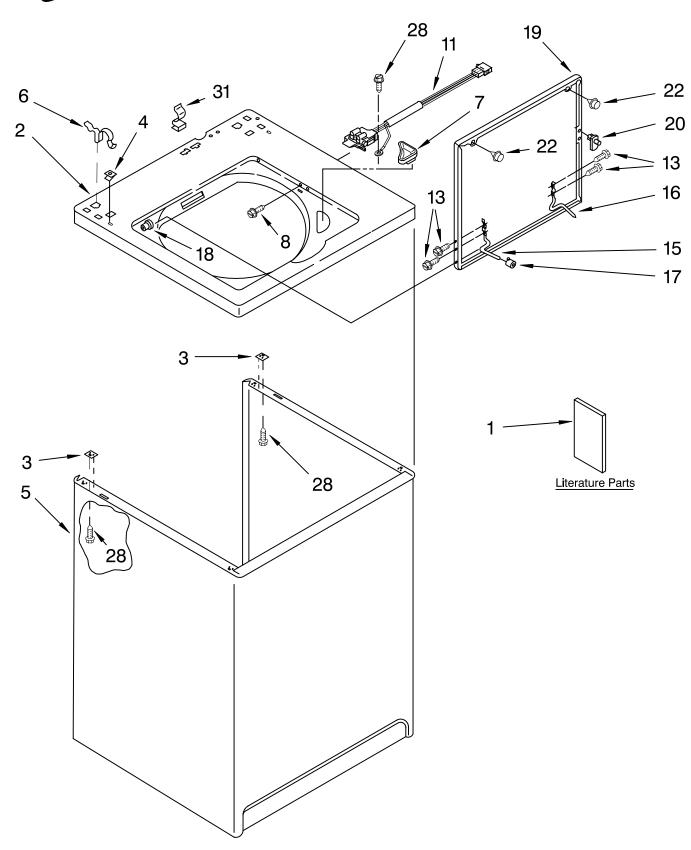


TOP AND CABINET PARTS

Illus. No.	Part No.	DESCRIPTION
1	LIT3952817 LIT3951578 LIT3955155 LIT3954821 LIT3955542 LIT3954745	Literature Parts Installation Instructions English French Use & Care Guide English French Energy Guide Wiring Diagram
		/ Be Purchased
	D-IT-YOU EPAIR MA	
	LIT4313896	Manual, Washer
2	8271378	
3	8271380 62750	Biscuit Spacer, Cabinet To Top (4)
4 5	357213	Nut, Push-In (2) Cabinet
	63424 3954357	
6	62780	Clip, Top & Cabinet & Rear Panel (2)
7 8	3362952 3356311	
11 13	3949237 3351355	Switch, Lid Screw, Lid Hinge
15 16 17 18	54584 91770 19119 21258	Hinge, Lid (R.H.) Bumper, Lid Hinge Bearing, Lid
19		Hinge (2) Lid
20 22 28 31	3954489 3954491 358684 9724509 3390631 90016	White Biscuit Strike, Lid Switch Bumper, Lid (2) Screw, 10–16 x 3/8 Clip, Harness

CONTROLS AND REAR PANEL PARTS For Models: LSR8433KQ0, LSR8433KT0

(Designer White) (Biscuit)

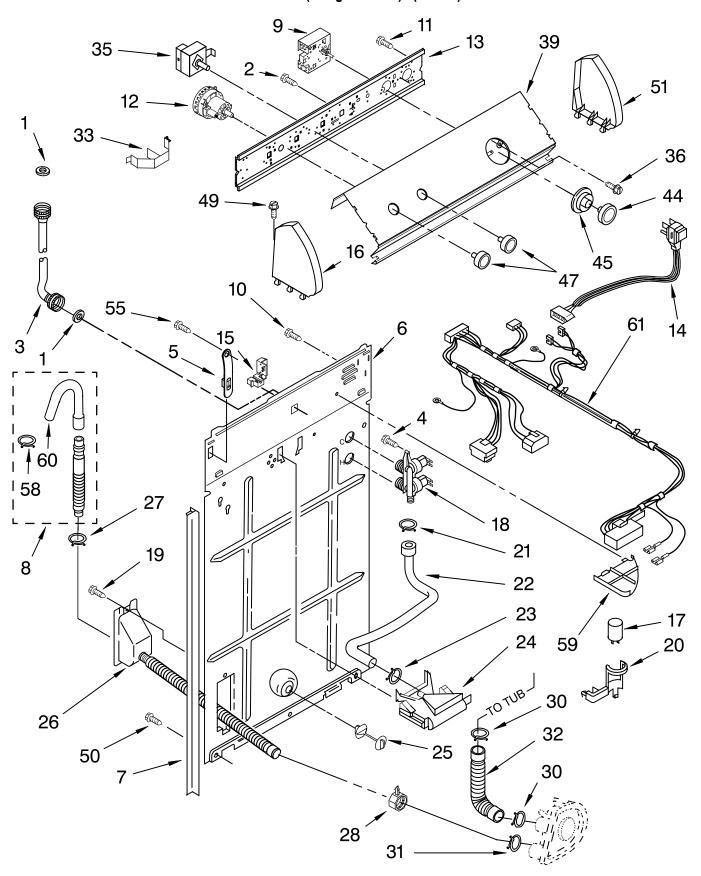

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROLS AND REAR PANEL PARTS For Models: LSR8433KQ0, LSR8433KT0

Illus.	Part		l IIIus.	Part		l IIIus.	Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
						-		
1	3976300	Washer, Water	13		Bracket, Control	35	661612	Switch, Water
		Inlet Hose (4)	14		Cord, Power			Temperature
_		(1-1/16 x 5/8)	15	3952821	,	36	3400808	Screw, Timer
2 3	3400073	Screw, Ground			Power Cord			Mounting
3		Hose, Water	16		Cap, End (L.H.)	39		Panel, Console
		Inlet (2)		8271365			3955356	
		Blue Coupler		8271368			3955357	
		Red Coupler	17	661606	Capacitor,	44		Knob, Timer
4	9740848				Motor Start		8271345	
5		Strap, Console (2)	18	3952164	Valve, Water		8271347	
6		Panel, Rear			Mixing	45		Dial, Timer
7		Pad, Rear Panel	19		Screw, 10-24 x 1/2		8271351	
8	3951609	Hose, Drain	20		Clip, Capacitor		8271370	
		(4 ft.)	21		Clamp, Hose	47		Knob, Control
	661577	Hose, Drain	22	3357328	Hose, Vacuum		8271339	
		(9 ft.)			Break		8271348	
		(Not Included)	23		Clamp, Hose	49	388326	Screw, 8-18 x 1.25
	3357090	Extension	24		Break, Vacuum			(Panel to Top)
		Drain-Hose	25	8519200	Support, Rear	50	62863	Screw, 10-16 x 3/8
		(21 Inches)			Panel	51		Cap, End (R.H.)
_		(Not Included)	26	8317940	Hose-Corrugated		8271359	
9	3948852	- ,			Assembly		8271362	
		(60 Hz.)	27		Clamp, Hose	55		Screw, 8-18 x 1/2
		(Motor Not A	28		Clamp, Hose	58	3366913	Clamp, Drain
		Service Part)	30		Clamp, Hose			Hose
10		Screw, Ground	31		Clamp, Hose	59		Shield, Suds
11		Screw	32		Hose, Pump To Tub	60	3357027	Nozzle-Drain
12	3366848	Switch, Water Level	33	8055003	Clip, Harness			Hose
					& Pressure Hose	61	3955015	Wiring Harness
								(For Detail See
								Pages 9 & 10)
			l					


AGITATOR, BASKET AND TUB PARTS For Models: LSR8433KQ0, LSR8433KT0 (Designer White) (Biscuit) 1 7 23 -2 20 26 ! 13 19 16. 6 1 18

AGITATOR, BASKET AND TUB PARTS For Models: LSR8433KQ0, LSR8433KT0

(Designer White) (Biscuit)


Illus. No.	Part No.	DESCRIPTION
1	63580	Dispenser,
•	00000	Fabric Softener
2	358237	Screw & Washer (5/16–24 x 1)
3	3348752	Clothes Mover
3 4	3347288	Agitator
5	63851	Tub Ring & Gasket
6	3359585	Gasket, Tub Ring
7	3354845	Clip, Agitator
8	3355921	Washer, Agitator
9	3363663	
10	3366877	Dog, Agitator Clutch
11	3363661	Bearing, Cam Driven
12	21366	
13	3951989	
		Ring
	0500074	(Also Order #14)
14	8522271	
16	63849	
17	389140	Block, Basket Drive
18	383727	=
19	3347780	Hose, Pressure
		Switch
20	3348117	Agitator (Complete)
22	3350389	Spacer, Thrust
23	3347290	Cap, Barrier
24	3348855	Seal, Inner Cap
26	3949550	Washer

BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

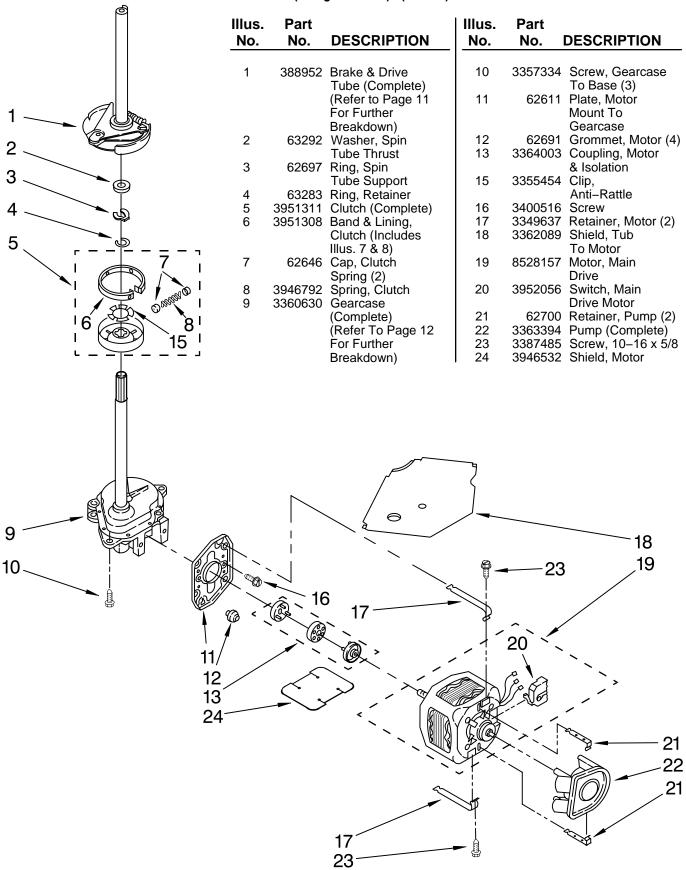

MACHINE BASE PARTS

For Models: LSR8433KQ0, LSR8433KT0 (Designer White) (Biscuit)

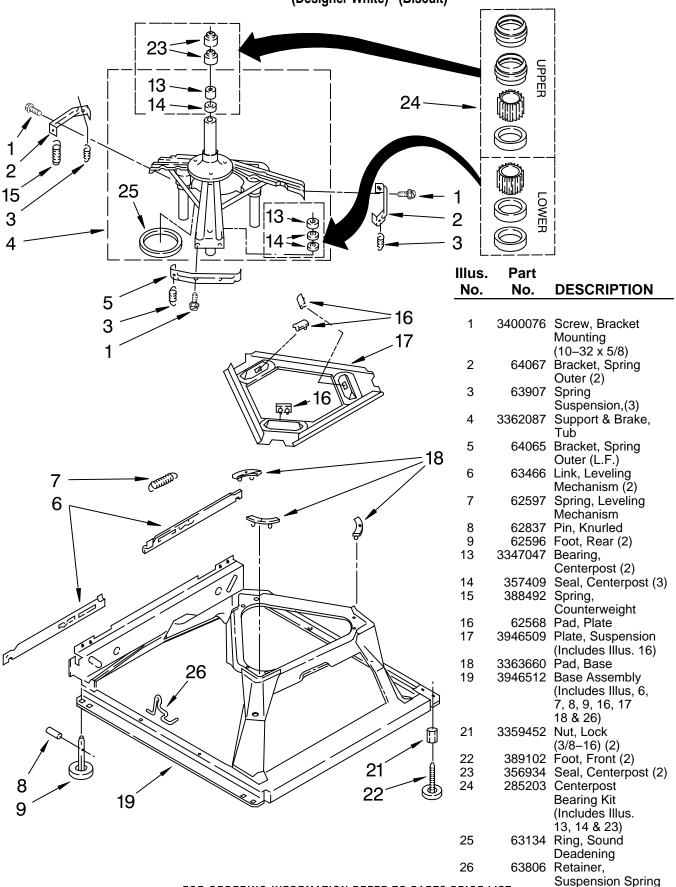


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

8

WIRING HARNESS PARTS For Models: LSR8433KQ0, LSR8433KT0

For Models: LSR8433KQ0, LSR8433KT0 (Designer White) (Biscuit)

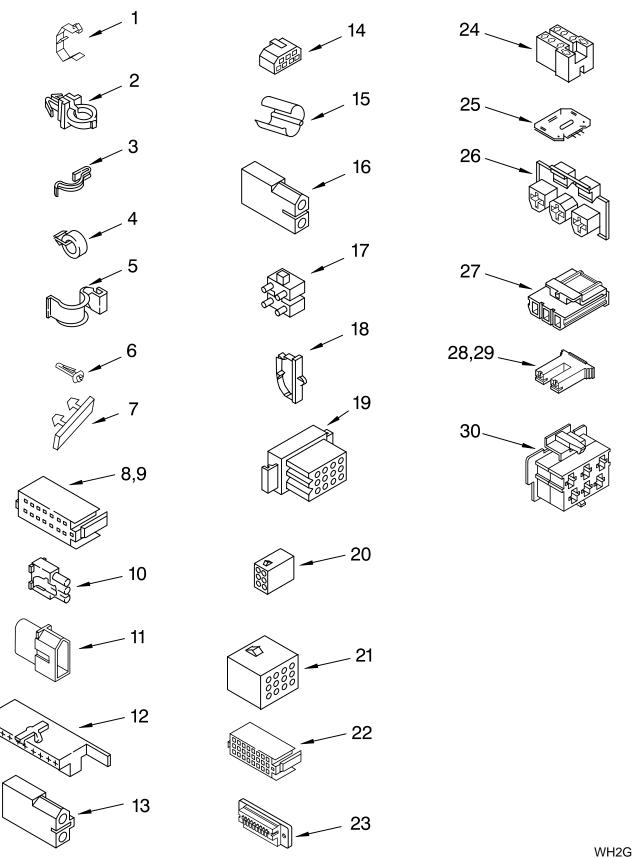

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS For Models: LSR8433KQ0, LSR8433KT0

For Models: LSR8433KQ0, LSR8433KT0 (Designer White) (Biscuit)


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1 2 3 4 5 6 7	388498 3347812 3352501 90016 3390496	Disconnect	13 14 15 16	3347243 63523 717252	(Use Term. 352088) Protector Connector (2–Way) (Use Term.94614)	23 24 25 26	60687 3407125	` ,
9	352089	(White) Timer, Block Disconnect (Black)	17	387500	Plug, Terminal (4–Way) (Power Cord) (Use M3 Screws)			(3–Circuit) (Pressure Switch) (Use Term.3948619 OR 3948620.)
10	62889	Receptacle, Terminal (3–Way) (Lid Switch) (Use Term.94613) Or 94614.)	18 19 20		Clip, Harness Block, Disconnect (12–Way) (Timer) (Use Term. 94613)	28 29	3354925 3354926	Block, Connector (Cold Valve) (Use Term.693217)
11	353424	Plug, Terminal (3–Way) (Power Cord) (Use Term.94613)	21		(6–Way) (Use Term. 94613) Plug, Terminal (12–Way)	30	3948615	Connector (T.P.A.) (6–Circuit) (Temp. Switch) (Use Term.3948619
12	62505	Block, Disconnect (Motor 2 Speed) (Use Term.352088)	22	3369366	(Use Term. 94613 Or 94614.) Timer, Block Disconnect (Black) (Amp) (Use Term. 3369365)			OR 3948620.)

FOR COMPLETE WIRING HARNESS REFER TO CONTROL AND REAR PANEL PARTS PAGE

WH2G

BRAKE AND DRIVE TUBE PARTS

For Models: LSR8433KQ0, LSR8433KT0

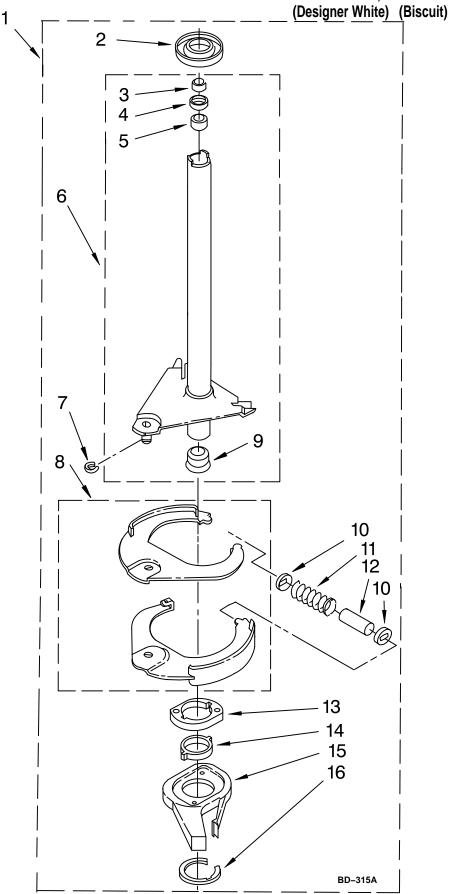


Illus. No.	Part No.	DESCRIPTION
1	388952	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
2 3	91939	Seal, Oil
4	356427	Seal, Drive Tube
5	356937	Spacer, Drive Tube
6	64027	Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)
7	64035	Ring, Retaining
8	64232	Shoe, Brake
9	62703	"T" Bearing,
		Spin Tube
10	62648	Cap, Brake Spring (2)
11	387806	Spring, Brake
12	62909	Sleeve, Brake
		Spring
13	63023	Cam, Brake Release
14	63022	Sleeve, Cam
15	64194	Driver, Brake
		Cam
16	90368	Ring, Retaining
		J. J

FOLLOWING PARTS NOT ILLUSTRATED


285208 Lubricant (Use Only In Brake Shoe Assembly On Roller & Pin)

GEARCASE PARTS

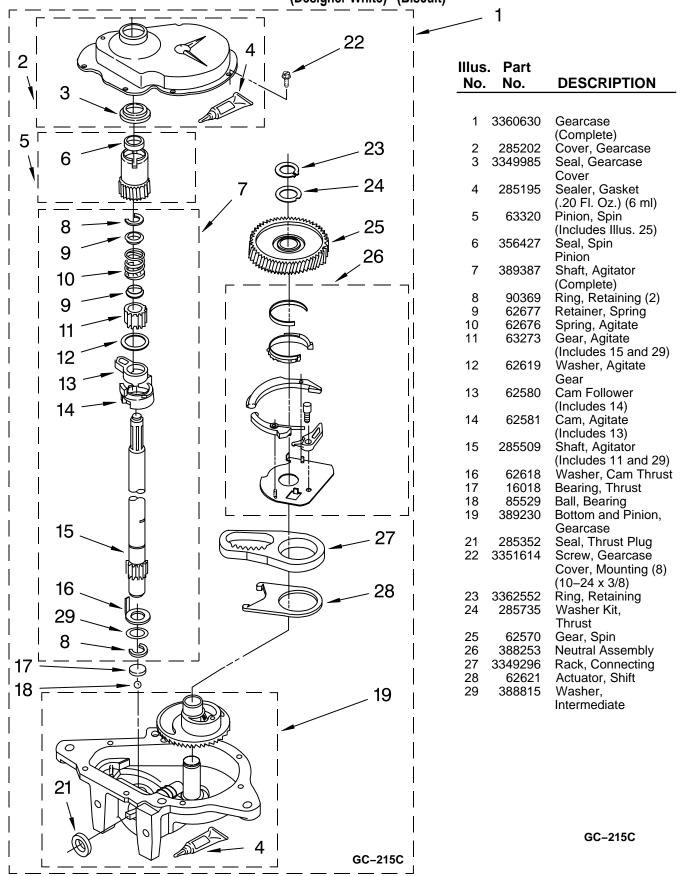

WATER SYSTEM PARTS

For Models: LSR8433KQ0, LSR8433KT0 (Designer White) (Biscuit)

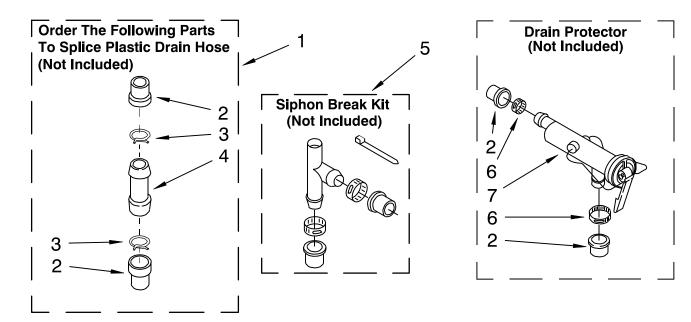


WS400

Illus. No.	Part No.	DESCRIPTION
1	285442	Connector Kit, Plastic Drain Hose
2	285321	Sleeve Kit, (Contains 2 Sleeves)
3	370447	Clamp, Hose
4	16272	Connector, Straight
5	285320	Siphon Break Kit
6 7	65349 367031	(Not Included) Clamp, Hose Drain Protector (Not Included)

MISCELLANEOUS PARTS

For Models: LSR8433KQ0, LSR8433KT0 (Designer White) (Biscuit)

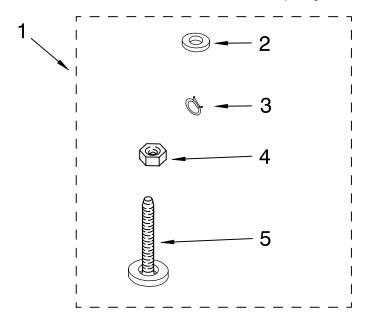

Illus. No.	Part No.	DESCRIPTION
1	3976263	Miscellaneous Parts Bag
2	3976300	Washer, Inlet Hose (1–1/16 x 5/8) (4)
3	3366912	Clamp, Hose
4	3359452	Nut, Lock (3/8–16)
5	389102	Foot, Front (2)

OPTIONAL PARTS (NOT INCLUDED)

Illus. Part No. No. DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
PAINT, TOUCH-UP (1/2oz.) 72017 White 4392899 Biscuit	OIL	350572	Oil, Gearcase (16 Oz.)	SEAL		Sealer, Gasket (.20 Fl. Oz.) (6 ml)
PAINT, PRESSURIZED SPRAY (12 oz.) 350938 Primer, Gray 350930 White 4392901 Biscuit PAINT, BULK (1 qt.) 799344 White (Uncut) 4392900 Biscuit (Uncut)	LUBI	285208	Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin)		367031	Shipping Kit Y PARTS